✖

✖

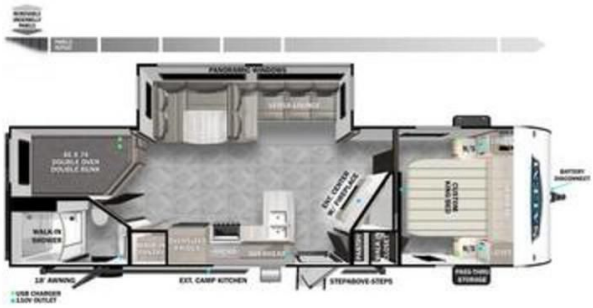
PANORAMIC WINDOWS
SOFA LOUNGE
WALK IN SHOWER
EXT. CAMP KITCHEN
STEP/ABOVE-STEPS
CLOSING WALLS
BATTERY DISCONNECT
USB CHARGER
120V OUTLET

26DBUD